



Instructions for Rutgerson fullbatten fitting 1580.

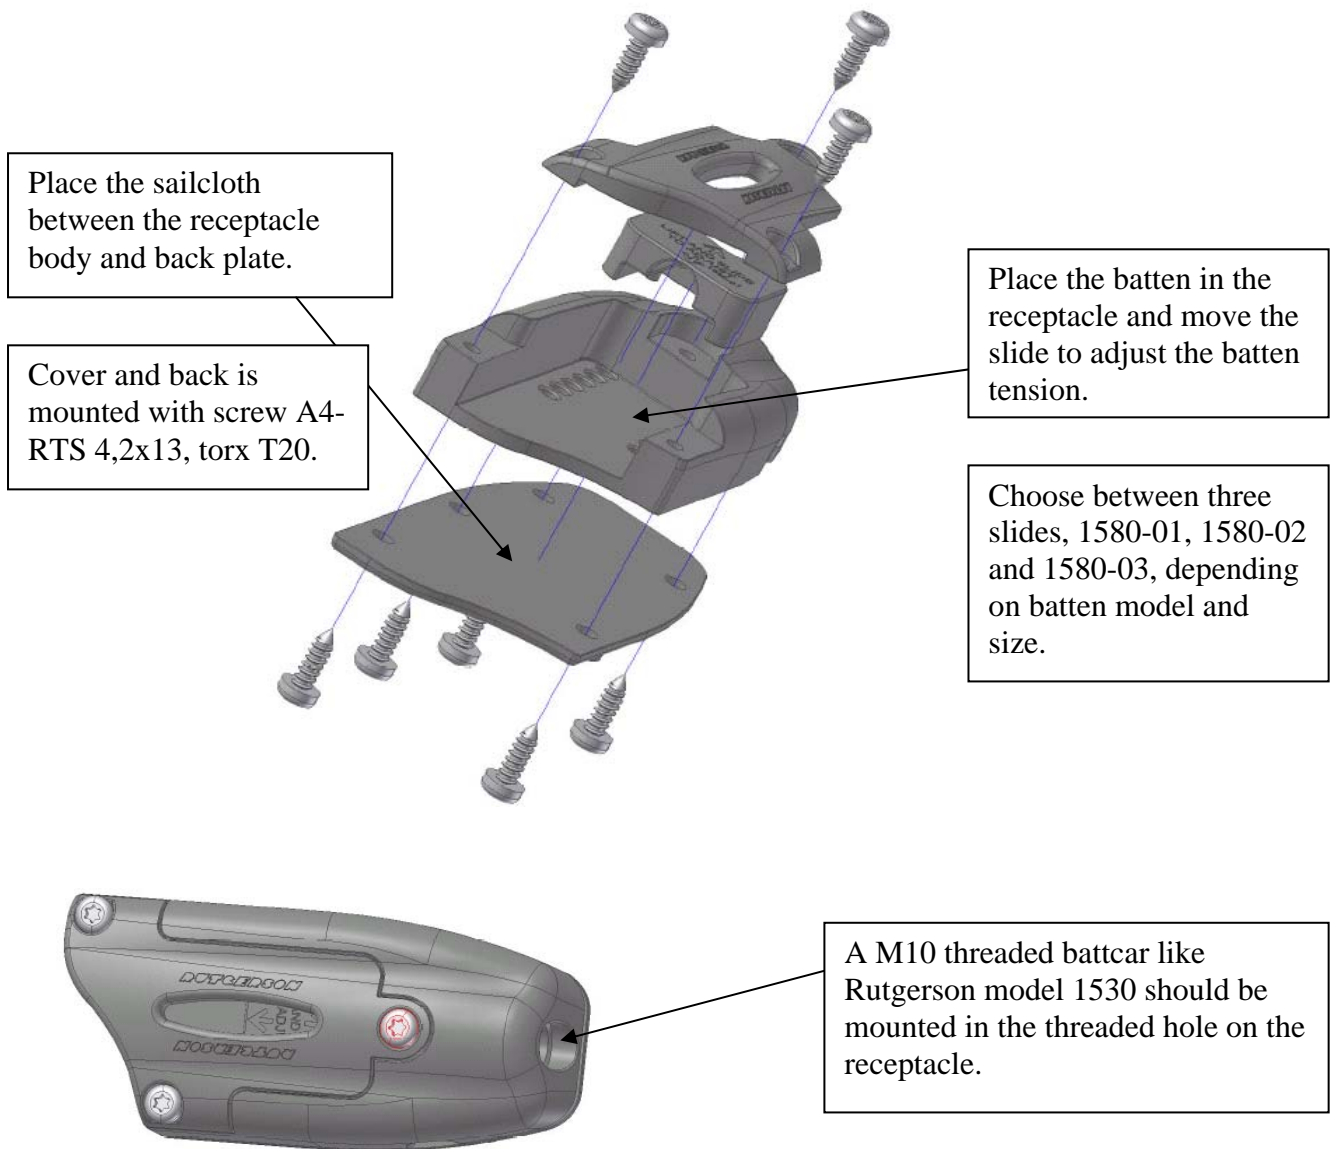

Product	Weight	Length	Width	Height	Max batten	Adjustment
1580-1	100 g	110 mm	49 mm	23 mm	Round Ø10, flat 20x4 mm	30 mm
1580-2	100 g	110 mm	49 mm	23 mm	Flat 30x6 mm	30 mm
1580-3	100 g	110 mm	49 mm	23 mm	Thick 21x10 mm	30 mm

Product	Assembling battcar	Mounting screws	Further information
1580	Threads M10	A4 RTS 4,2x13 (8 pcs. Included.)	For boats 25-35 feet

Monteringsanvisning för Rutgerson Fullattebeslag 1580

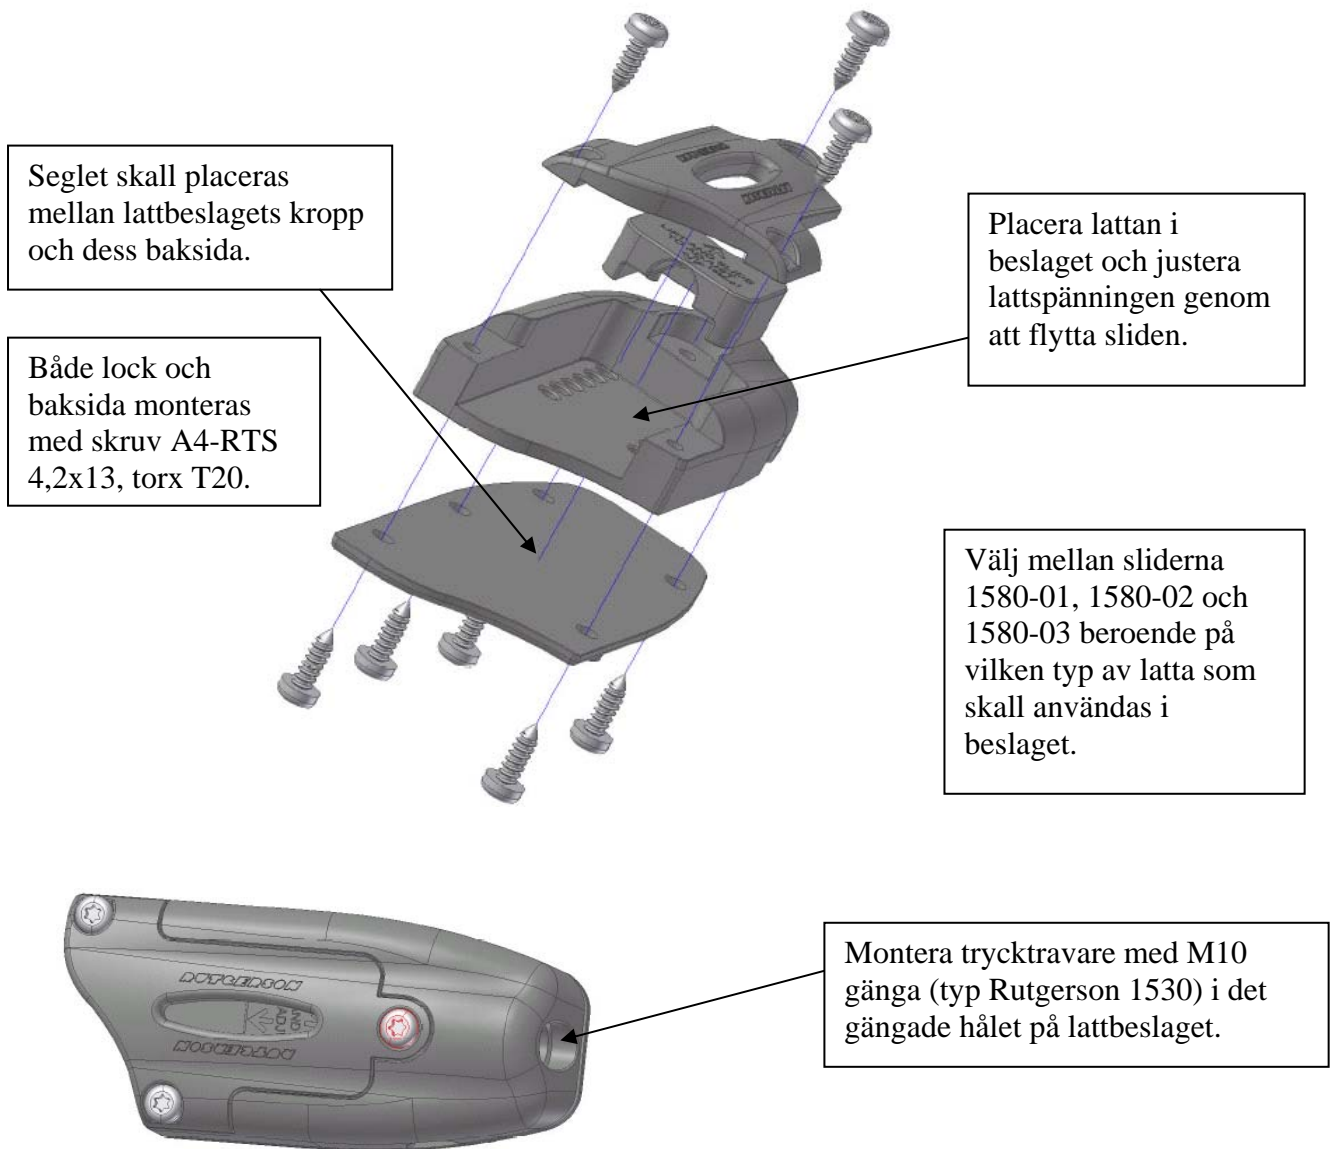

Produkt	Vikt	Längd	Bredd	Höjd	Max lattstorlek	Justerlängd
1580-1	100 g	110 mm	49 mm	23 mm	Rund Ø10, platt 20x4 mm	30 mm
1580-2	100 g	110 mm	49 mm	23 mm	Platt 30x6 mm	30 mm
1580-3	100 g	110 mm	49 mm	23 mm	Tjock 21x10 mm	30 mm

Produkt	Infästning travare	Monteringsskruv	Övrig information
1580	Gänga M10	A4 RTS 4,2x13 (medföljer 8 st.)	För båtar 25-35 fot